

# FSM:

## Flash for Yamaha 01V - Effect 1 / 2 on / off by using **one** single switch / latch:

Midichannel 1, Controller 53 and 54 (Effects On/Off), switch 1, when using a **latch**

F0 - 00-20-0D-7F-07-00 07 30 35 00 30 36 00 F7

Midichannel 1, Controller 53 and 54 (Effects On/Off), switch 1, when using a **switch**

F0 - 00-20-0D-7F-07-00 03 30 35 00 30 36 00 F7

---

## Flash for Yamaha 01V - Effect 1 / 2 on / off by using **two** switches / latches:

Midichannel 1, Controller 53 (Effect 1 On/Off) , switch 1, when using a **latch**

F0 - 00-20-0D-7F-07-00 03 30 35 00 F7

Midichannel 1, Controller 54 (Effect 2 On/Off) , switch 2, when using a **latch**

F0 - 00-20-0D-7F-07 01 03 30 36 00 F7

Midichannel 1, Controller 53 (Effect 1 On/Off) , switch 1, when using a **switch**

F0 - 00-20-0D-7F-07-00 03 30 35 00 F7

Midichannel 1, Controller 54 (Effect 2 On/Off) , switch 2, when using a **switch**

F0 - 00-20-0D-7F-07-01 03 30 36 00 F7

No liabilities for errors or misprints!