

## Accessories:

- 1x VIEWare 7“
- 1x AC-Adaptor 12Volt AC, 1200 mA  $\ominus$ — $\bullet$ — $\oplus$
- 1x Mounting-Steelstrip
- 1x Connection cable VGA (D-Sub)
- 1x Connection cable AV-Video (RCA-Cinch)

## Optional accessories:

- Connection extension cable VWVK (AV-Video)
- Multiclamp

MIDITEMP GmbH  
Am Pfanderling 60  
D - 85778 Haimhausen  
Tel: +49 – (0) 8133 – 91 81 71  
Fax: +49 – (0) 8133 - 91 81 19  
Email: [info@miditemp.com](mailto:info@miditemp.com)

## Service & Support:

Email: [service@miditemp.de](mailto:service@miditemp.de)




Specifications and features may be changed without any prior notice.  
No liability for misprints or errors. ©MIDITEMP GmbH 2009\_12



# VIEWare 7

User Manual

# Operating-Elements:

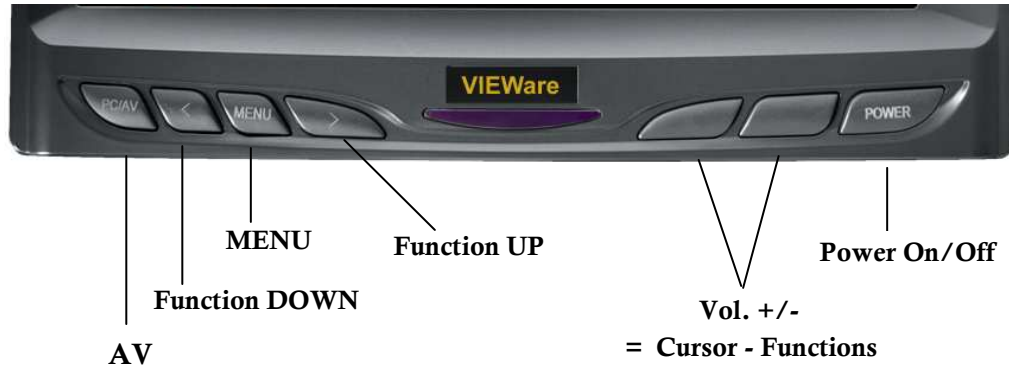

Thank you for purchasing a MIDITEMP® - Product. ☺

## Setting up your Vieware 7“

The supplied metal bar will allow you to mount the unit to a keyboard stand, a mic-stand or a Multiclamp etc., wherever you need it. Please refer to the attached rider on „*Mounting onto a Multiclamp*”

## Connecting your VIEWare 7“

Please connect one of the supplied cables on the bottom side, concerning what host connection you have on your host unit (VGA/Video).

*Video: The cable with the yellow RCA-Cinch-plug on one side*

*VGA: The cable with the black D-Sub-connector on one side*

The connector for the supplied AC Adaptor is on the bottom side of the VW7” - or you also can connect it to the connector at the cable, as you like.

**Please don't power up the unit before you have finished all your connections, to avoid any short circuit while hot-plugging!**

Overview of the VW6”'s features and functionality.

## General operation to change a setting

After recalling the desired menu:

Push the CURSOR +/- once, select the desired function, activate this function by pushing VOL +/- , change value by using FUNC +/- and press MENU to confirm your changes!

---

**Press: 1x MENU:**

### COLOR settings

*Brightness* +/-

*Contrast* +/-

*Colour Temperature* +/-

**Press: 1x MENU , then 1x FUNC UP:**

**SOUND settings** *w/o function, for there are no speakers inside*

**Press: 1x MENU, then 2x FUNC UP:**

### FUNC settings

*Reset:* Sets the VW7“ to the default factory settings

*Display Ratio:* Change format of the screen, 4:3 or 16:9

*LR:* mirror-inversion left/right

*UD:* mirror-inversion up/down

**Press: 1x MENU, then 3 x FUNC UP:**

### OSD settings

*Language:* User language– *English/Chinese*

*H-Position:* Horizontal spacing of the OSD-screen

*V-Position:* Vertical spacing of the OSD-screen

*OSD-Timeout:* Sets the fade-out time of the OSD-screen

*Transparent:* Transparency of the OSD-screen

**Press: 1x MENU, then 4x FUNC UP:**

### Adjust settings

*Auto Config:* To adjust automatically after power on

*H-Position:* Horizontal spacing

*V-Position:* Vertical spacing

*Phase:* To adjust the phase

*Clock:* To adjust the clock, make field and line synchronisations

---

After you have finished your settings, just wait a few seconds (See OSD-Timeout). The MENU-functions will vanish automatically